




L

R

STEP2
x8 M4X16

STEP4/5
x8 M5x6

STEP9/11
x8 M4X16

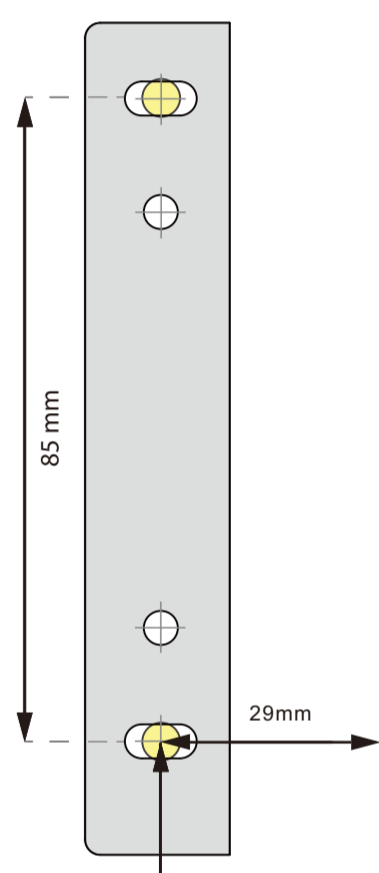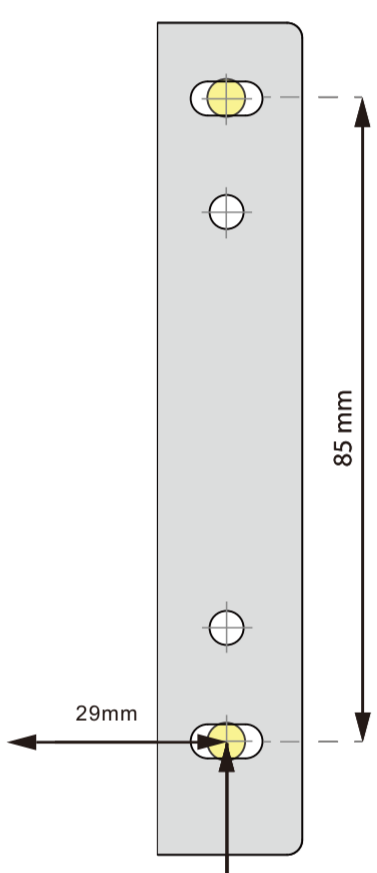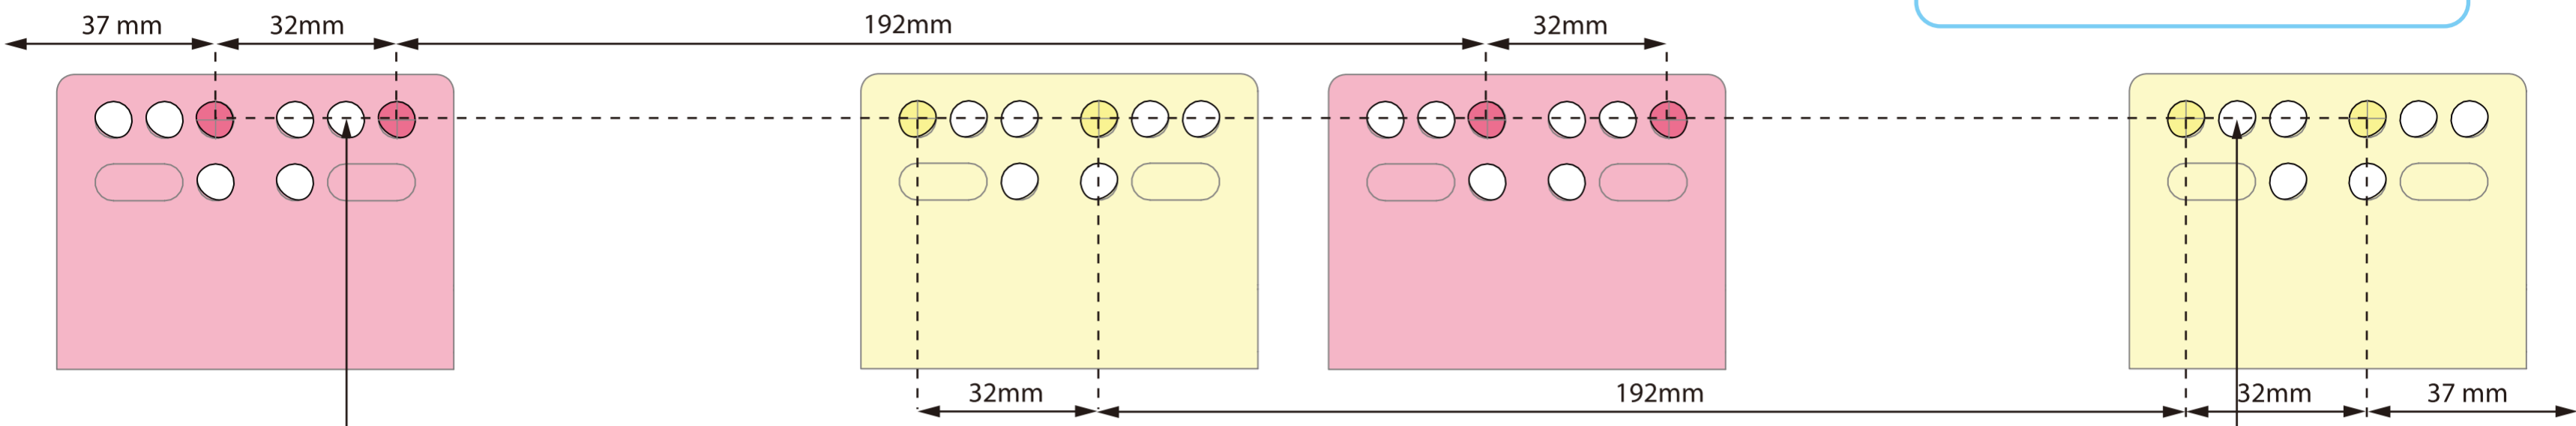

1

x8

Measure from bottom edge of cabinet and use template to mark holes with awl.

2

x8

Drill and screw lower runners.

3

Install metal brackets. Makes click sound.

4

x4

Screw metal brackets to the plastic tray

5

x4

Install plastic tray loosely with screws, allowing for adjustment.

6

Adjust plastic tray position, tighten screws when parallel.

7

Measure and mark the cabinet bottom and side edge on the door.

8

x4

L R

Use template to mark bracket holes on the door.

9

x4

Screw door arms to cabinet using the slotted holes.

10

Adjust left and right 1 then tighten. Adjust vertical 2 and tilt 3.

11

x4

Screw the front bracket to the door 1. Lock vertical and tilt adjustment 2.

12

Install screw covers.

13

laundry/ies

14

TIP

To release brackets from the runners, click switch 1 on the sides of the brackets and slide out 2.

L

R